


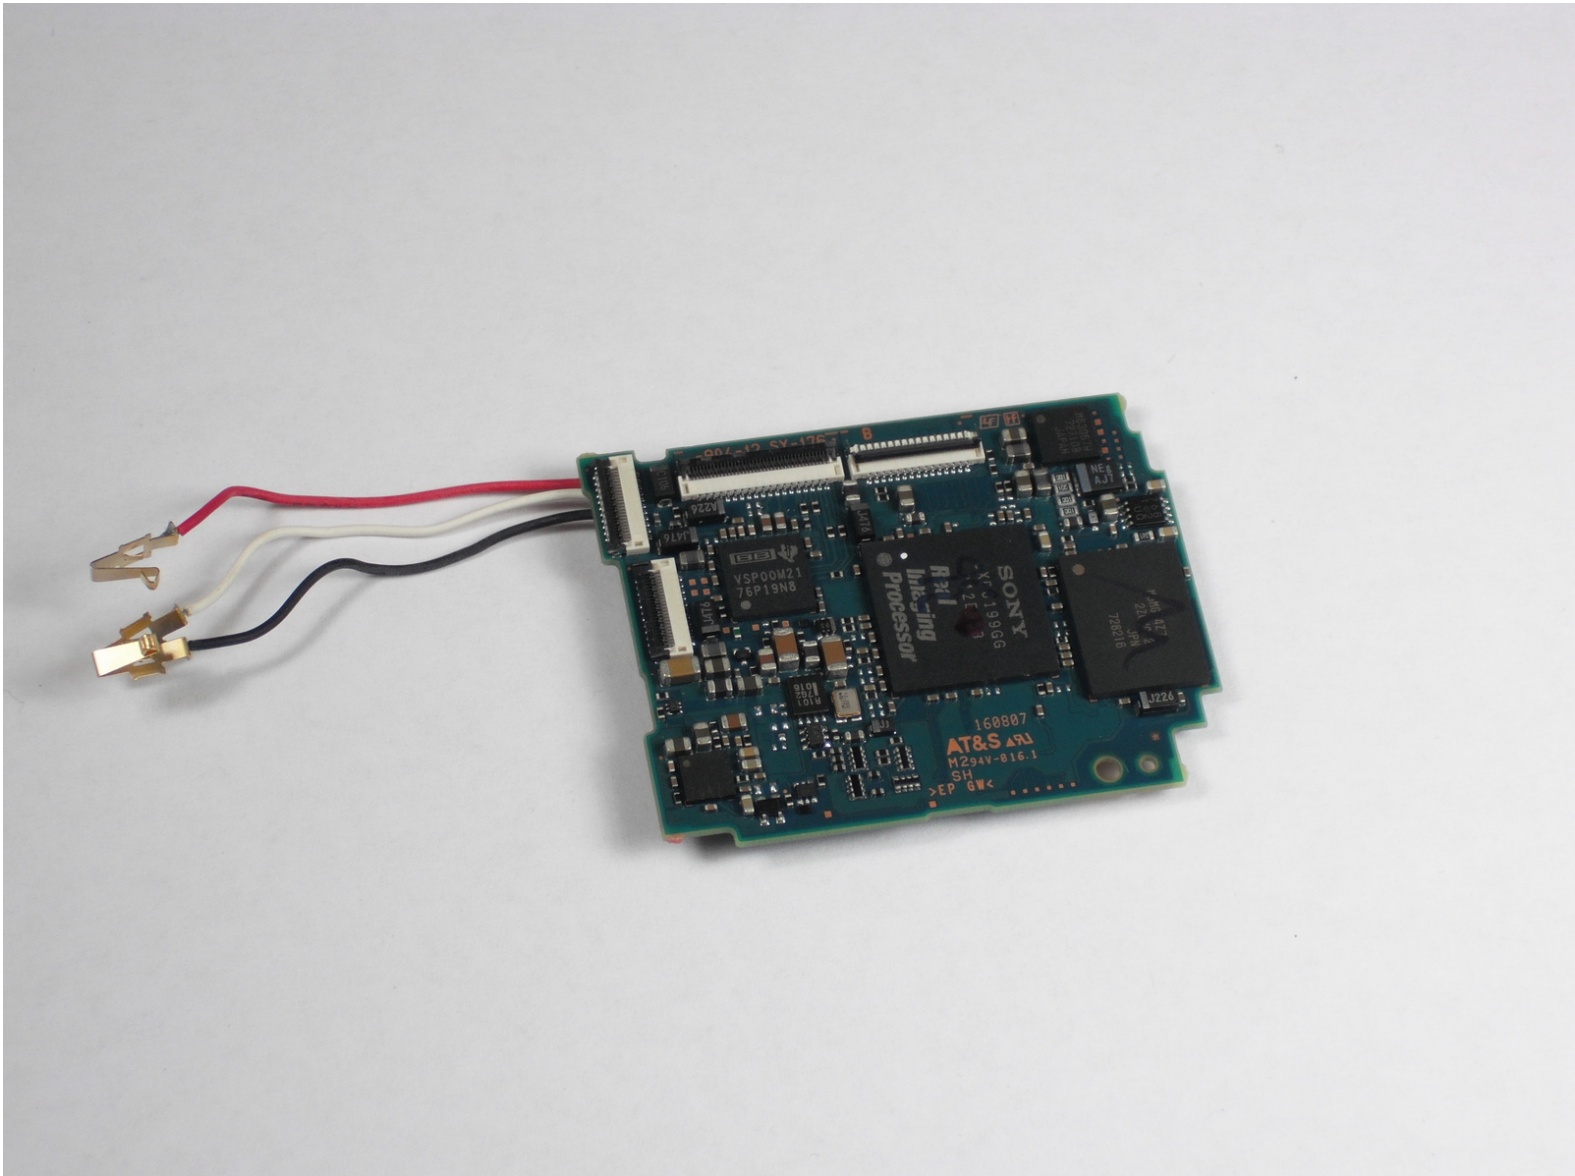

Sony Cyber-shot DSC-W55 Motherboard - First Half Replacement

How to replace a damaged Motherboard for the Sony Cyber-shot DSC-W55.

Written By: Christopher Wakamatsu



INTRODUCTION


This repair guide will number and display the steps to remove the Motherboard for replacement.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

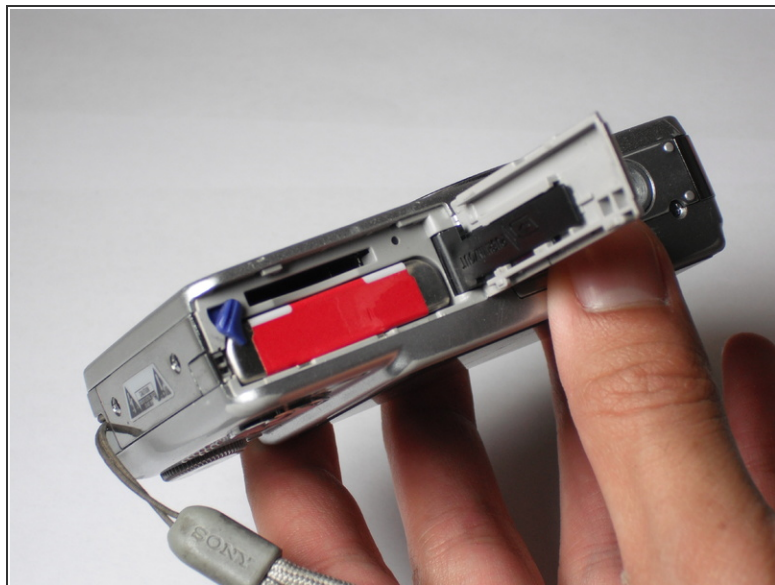



- Slide the battery cover in the direction the arrow points.
- Pull the battery cover towards you.

Step 2

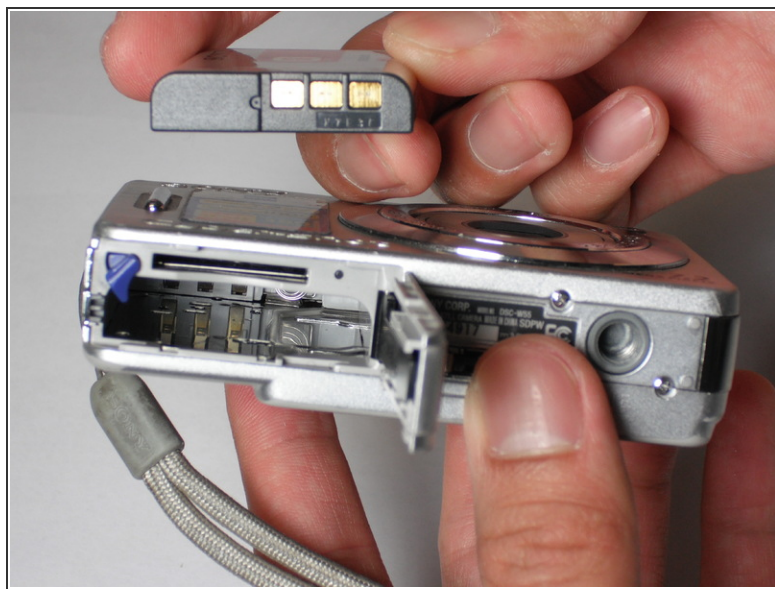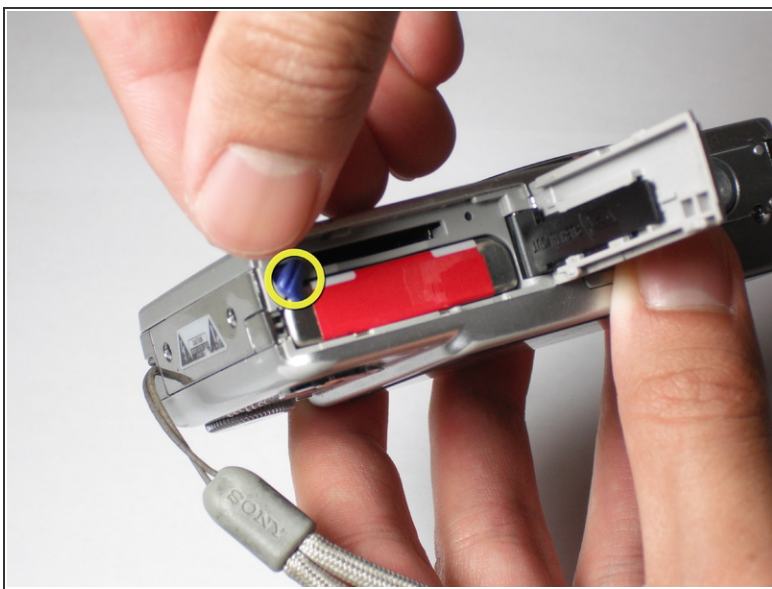

- Flick the blue switch for the battery to pop out.
- Remove the battery from the camera.

Step 3 — Back Case

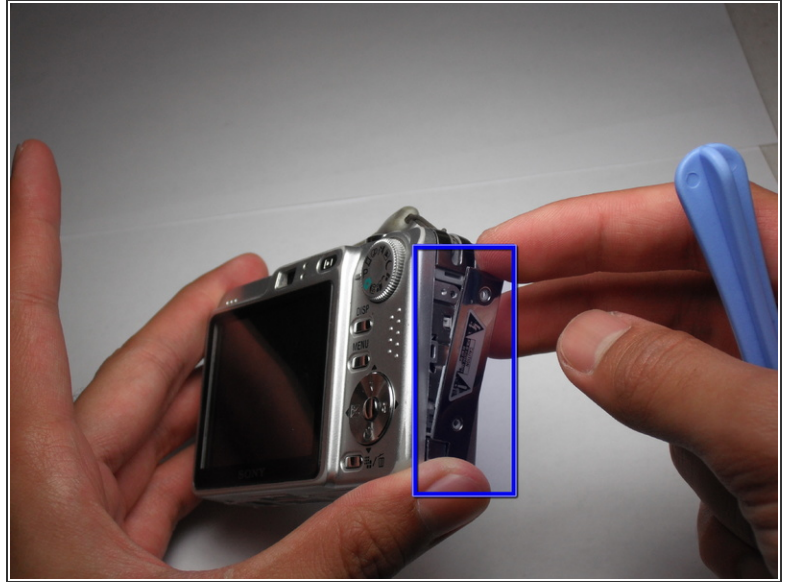
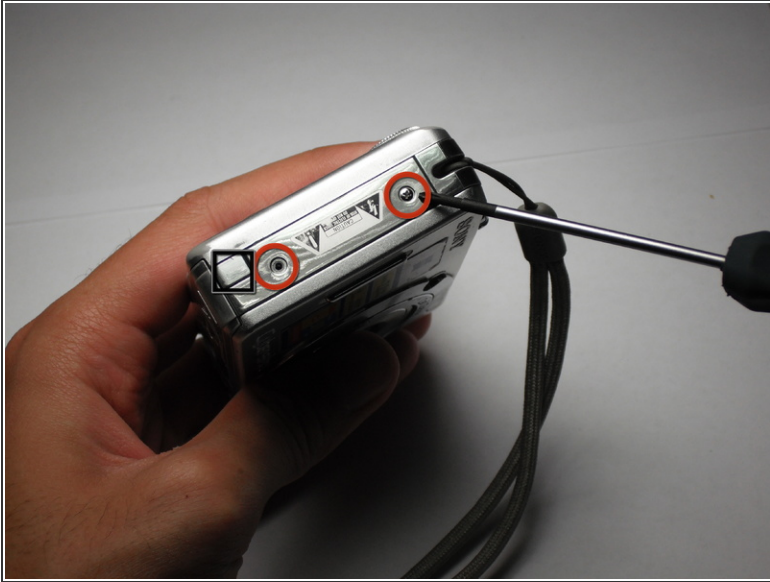


- Using the Phillips #00 Screwdriver,remove the two screws from the caution panel.

- Remove that panel.

⚠ Careful for falling pieces.

Step 4

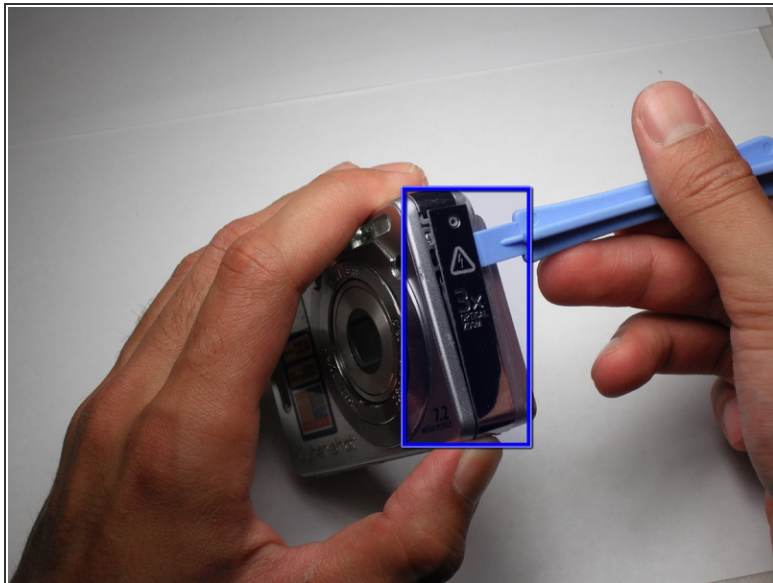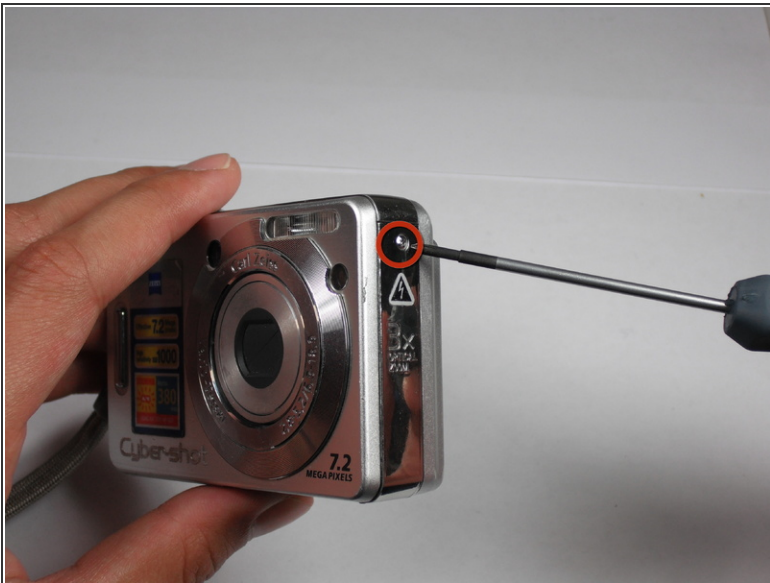


- Remove the screw with a Phillips #00 Screwdriver from the right side of the camera (with '3x optical zoom' engraved on the side panel).
- Remove that panel.

Step 5



- Remove the screw using the Phillips #00 Screwdriver from the bottom the camera, closest to the back cover.

Step 6

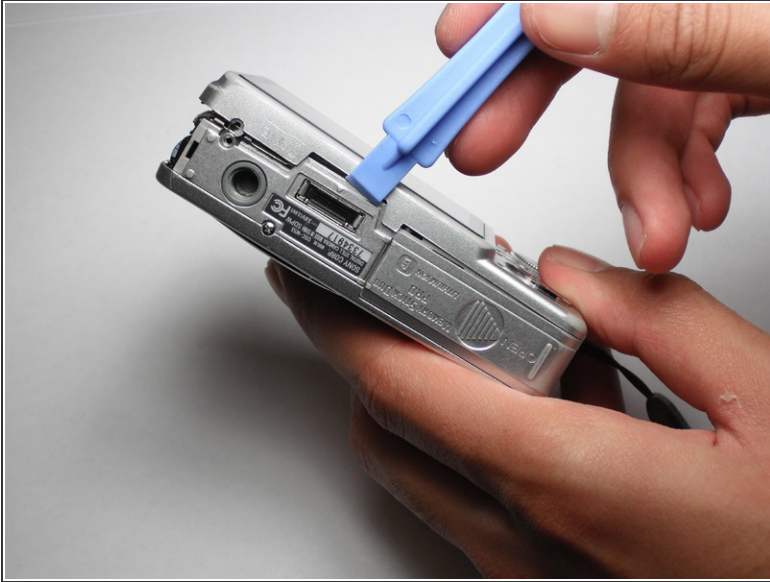

- Gently remove the back cover.


⚠ It may be a bit stiff, so use some force to remove it. Proceed with caution.

Step 7 — Front Case




- Remove the screw using a Phillips #00 Screwdriver on the left side (where the "3x optical zoom" panel use to be).

Step 8

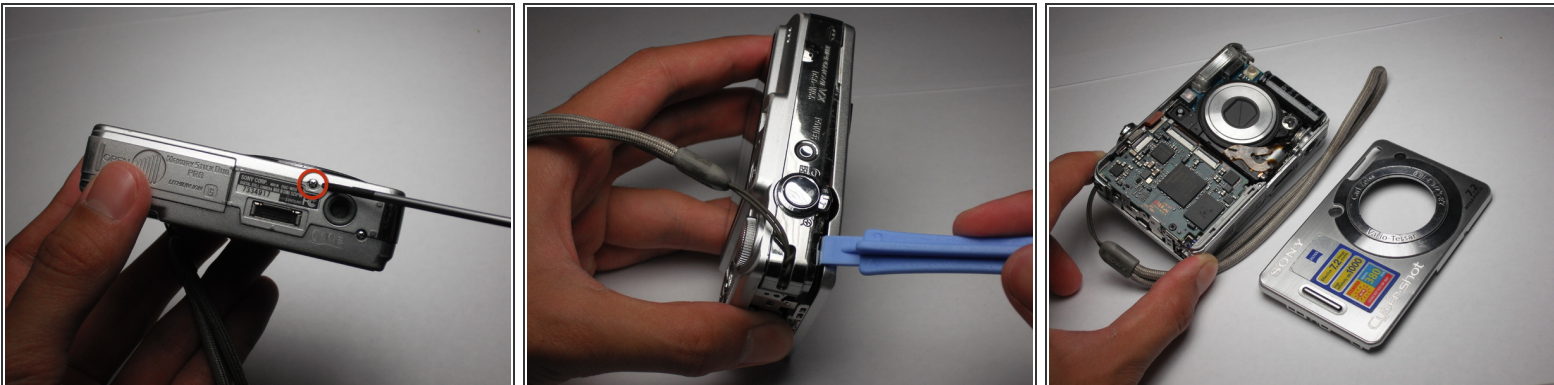



- Remove the small screw using a Phillips #00 Screwdriver on the bottom of the camera attached to the front cover.
- Gently remove the front cover.
- ⚠ Put a little force to pop off the case. Proceed with caution.

Step 9 — Lens

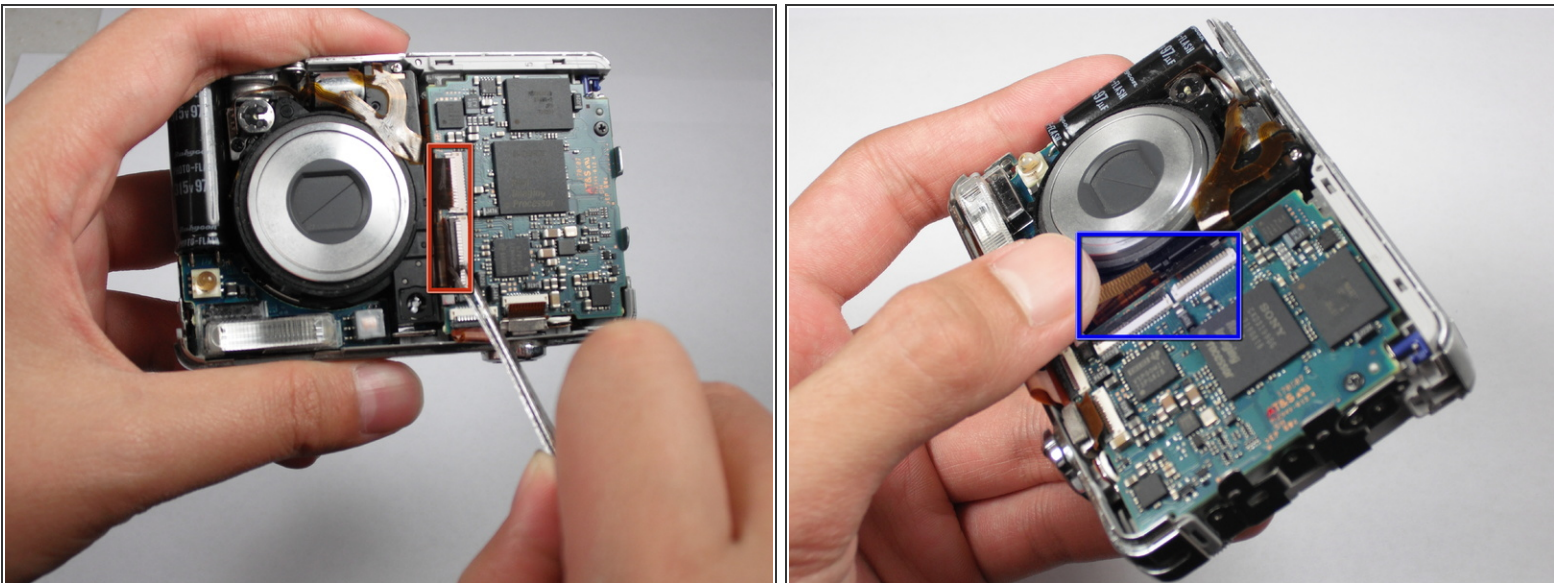


- Flip the black secure locks off. Tweezers may be necessary.
- Detach the two orange cables.

Step 10

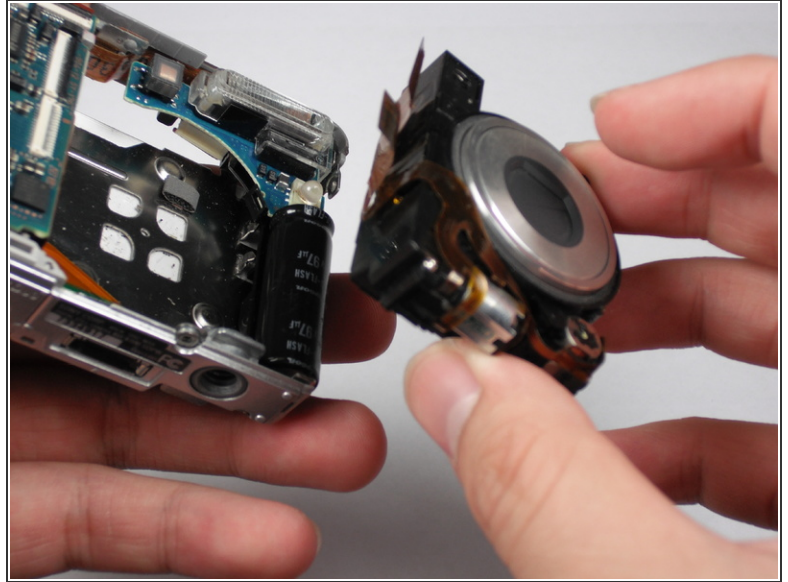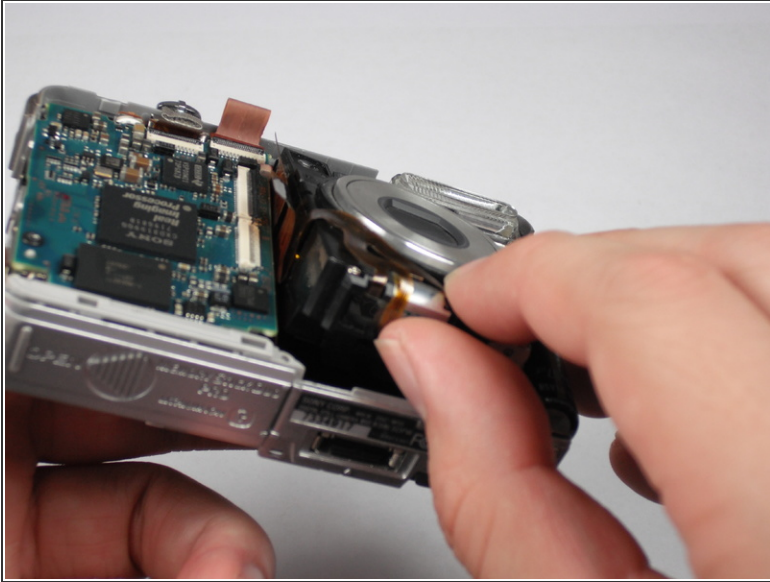



- Gently pull the lens container out of the camera.

Step 11 — Motherboard - First Half

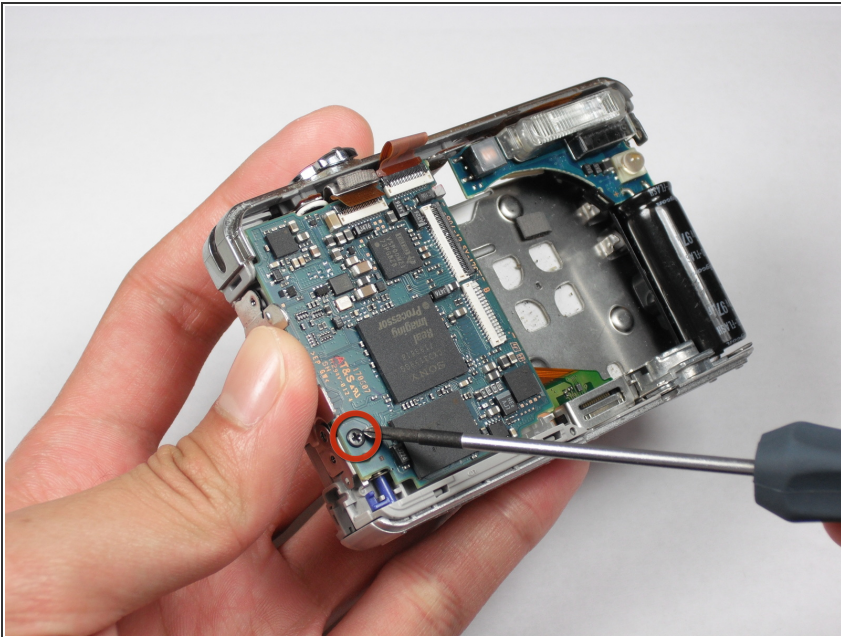



- Remove the black screw using a Phillips #00 Screwdriver on the motherboard.

Step 12

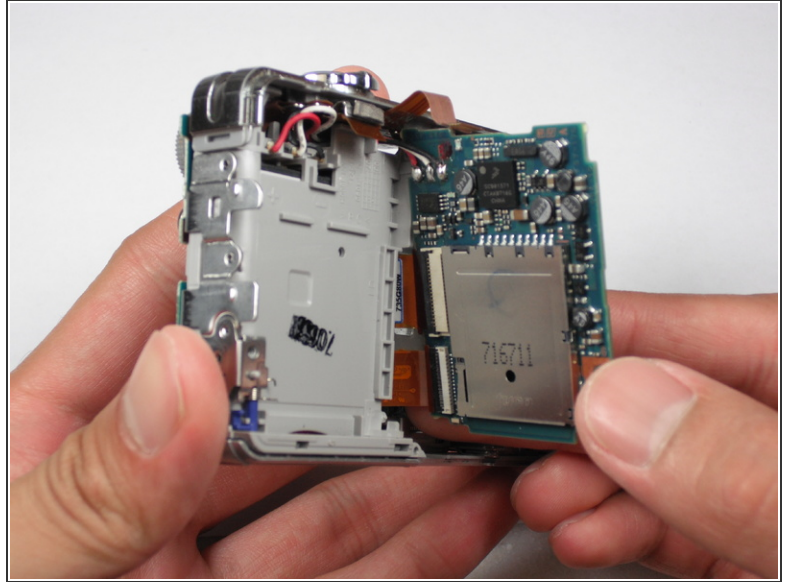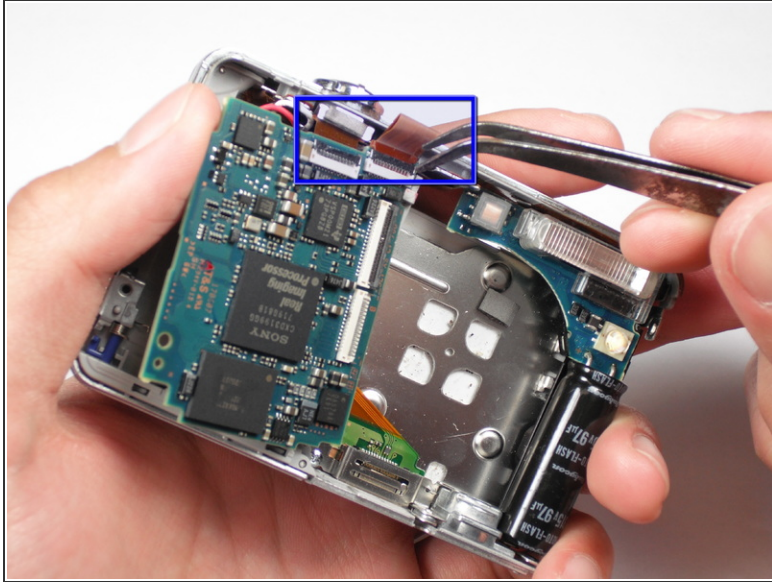

- Remove the two orange cables on the top of the motherboard with tweezers.
- Lift the motherboard out of its slot.

Step 13

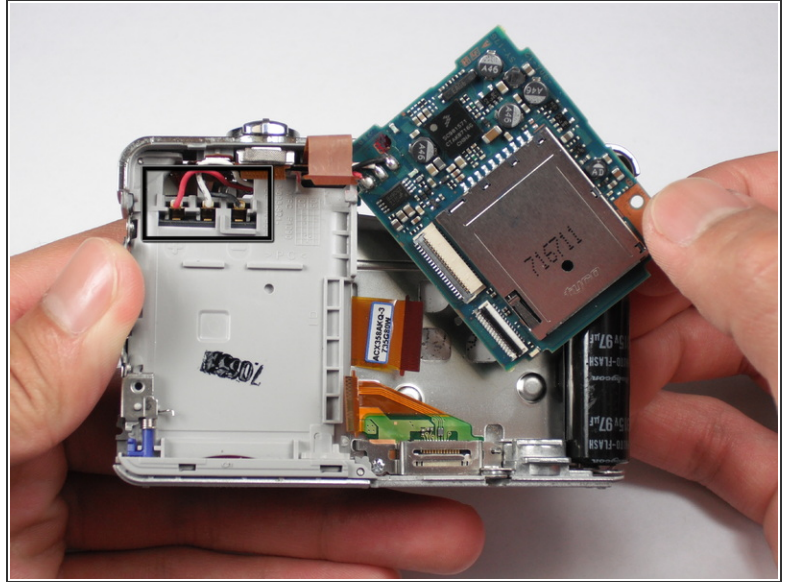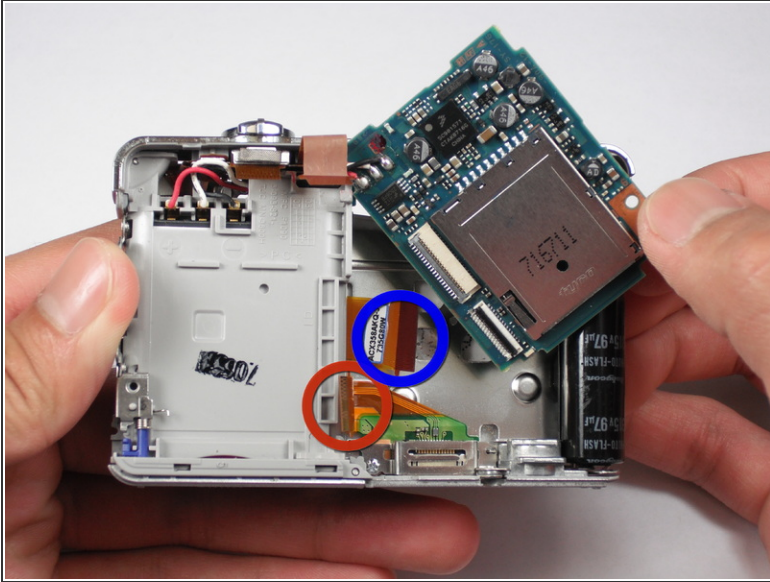

- For the AV port, detach the bottom orange cable.
- For the LCD screen, detach the top orange cable on the right side of the motherboard.
- For the motherboard, detach all the orange cables.

⚠ Careful not to damage the red, white, and black wires when lifting the board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 01:02:12 AM.